


* PLEASE NOTE: Before beginning the installation, check that the parts contained in the carton and hardware package match those parts listed below. If you should find any discrepancies please contact Holcam Sales at 1-800-843-3332 www.holcam.com

WARNING:

To avoid damaging the finish of this deluxe enclosure, use only mild cleaners. Always read the labels on the cleaner used. Do not use harsh chemicals or abrasive detergents.

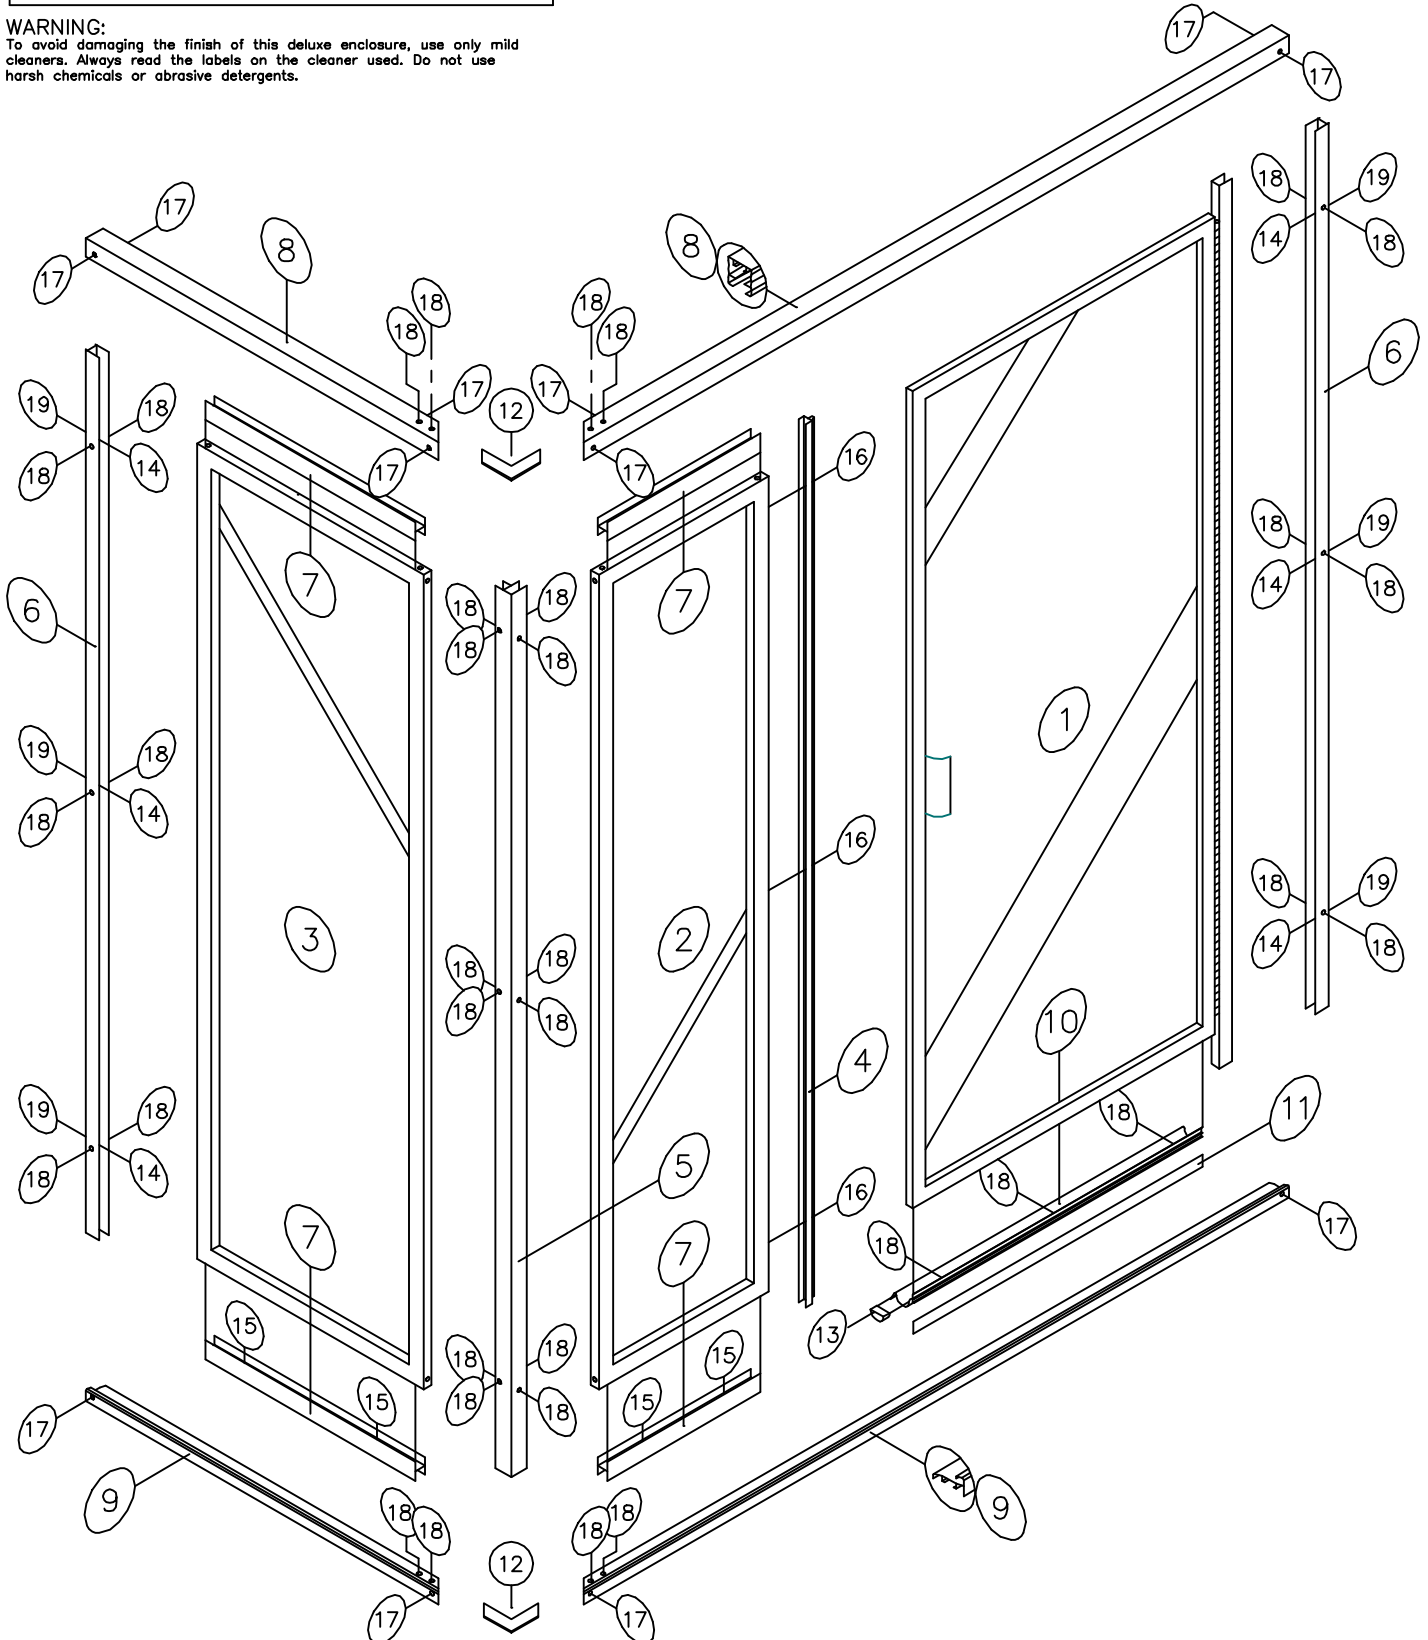

INSTALLATION INSTRUCTIONS:

MODEL S-3
WITH MAGNETIC STRIKE

1 Measure finished opening width at sill. Cut thresholds to length at square ends. Assemble thresholds with 90° splice plate and 6x3/8 screws. Position on sill.

2 Place wall jambs on thresholds and plumb. Mark hole locations and drill 1/4" holes for plastic anchors. Secure jambs to wall with 10x2 screws.

Wall Jamb (6)
Threshold (9)

3 Place 90° post on centerline of threshold splice. Measure distance from Panel B wall jamb to 90° post and cut bottom filler to this length.

4 Attach filler to threshold with two 8x1 flat head screws.








5 Set panel in filler and start into wall jamb. Set 90° post on threshold and over panel. Push post into panel and panel into wall jamb until tight against filler and plumb.

6 Hold top of panel with a C-clamp or with a 6x3/8 pan head screw.









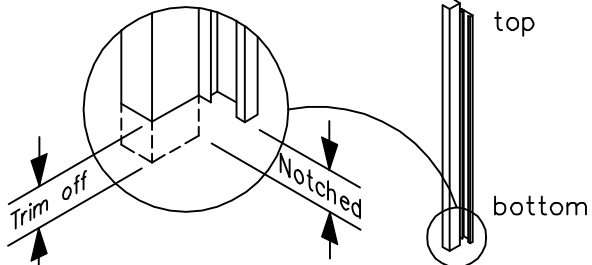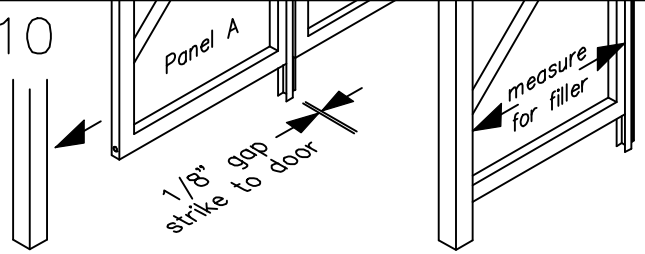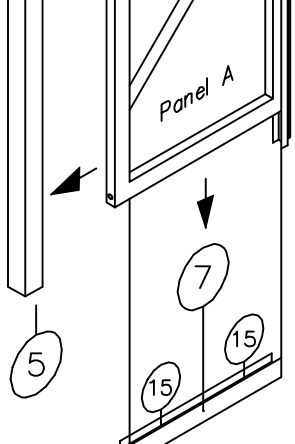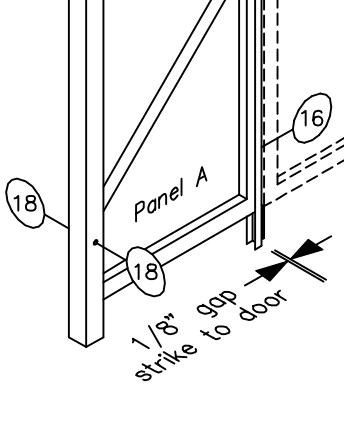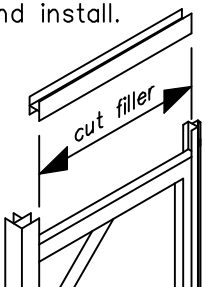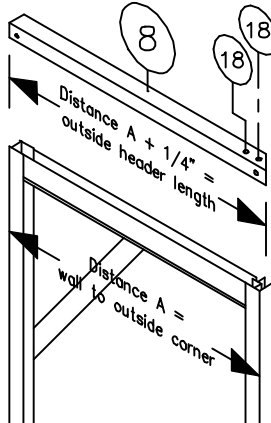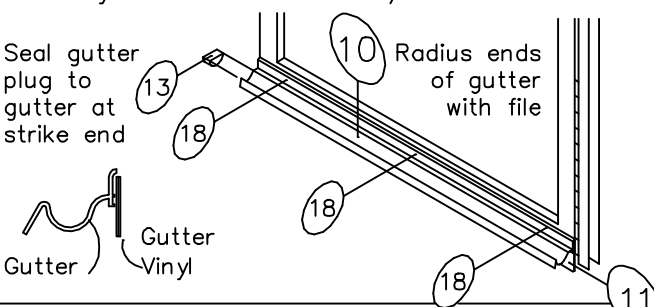






7 Check 90° post for plumb. Measure and cut top filler for Panel B. Secure Panel B in place with 6x3/8 pan head screws.


8 Set door assembly on threshold and start into wall jamb. Hold in place with a C-clamp or one 6x3/8 pan head screw.

NOTE: We recommend filing any sharp corners that may cause injury, then clean and seal unit with a continuous bead of silicone along the outside edges of wall jamb and threshold. Allow sealant to cure 24 hours before using shower. Do not seal inside edges of unit.

<p>9 Strike jamb is notched on both ends to facilitate right or left hand door installation.</p>  <p>After determining which end will be top, trim bottom end even with notch.</p>	<p>10</p>  <p>Position Panel A into 90° post with strike jamb attached. Plumb and adjust door to strike clearance to 1/8" gap. Measure distance at bottom between 90° post and strike jamb, and cut bottom filler to length.</p>
<p>11 Attach bottom filler to threshold with 8x1 pan head screws. Place Panel A on filler again and start into 90° post.</p> 	<p>12 Close the door and adjust the strike to door clearance to 1/8". Attach Panel A to wall jamb with 6x3/8 pan head screws, and attach strike jamb to Panel A with 8x3/4 flat head screws.</p> 
<p>13 Measure for top filler between 90° post and strike. Cut to length and install.</p> 	<p>14 Measure for Panel B header from 90° corner post to wall. Add 1/4" and cut square wall end of header to that dimension.</p>  <p>Measure for header at door and Panel A, from 90° post to wall. Add 1/4" and cut square end of header to length.</p> <p>Assemble headers with 90° splice plate and drill for 6x3/8 screws. Use 6x3/4 screws at jambs and 90° post.</p>
<p>15 Recheck entire unit. Be sure that magnetic strike and door operate properly.</p> <p>NOTE: Some adjustments can be made by shifting panels and/or door assembly, or by trimming top fillers and headers. When unit is ready, secure in place with 6x3/8 pan head screws.</p>	<p>16 Install gutter over gutter vinyl at door bottom with 6x3/8 screws. Be sure gutter slopes down to hinge end, and vinyl extends to within 1/8" of threshold.</p> 

MODEL S-3
CORNER SHOWER ENCLOSURE
WITH MAGNETIC STRIKE

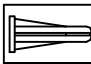CAT#:	PART LIST:	LENGTH:	QTY:	HARDWARE PACK:	QTY:
	DOOR ASSEMBLY		1		90° SPLICE PLATE 2
	PANEL A		1		GUTTER PLUG 1
	PANEL B		1		10x2 PAN HEAD SCREW 6
	H-18 STRIKE JAMB	69 15/16"	1		8x1 PAN HEAD SCREW 4
	H-24 90° CORNER POST	70 1/4"	1		8x3/4 FLAT HEAD SCREW 3
	H-36 WALL JAMB	70 1/4"	2		6x3/4 PAN HEAD SCREW 12
	H-35 PANEL FILLER		4		6x3/8 PAN HEAD SCREW 35
	H-55 HEADER		2		PLASTIC ANCHOR 6
	H-25 THRESHOLD		2		SPACER BLOCKS 6
	H-11 GUTTER		1		
	V-8 GUTTER VINYL		1		

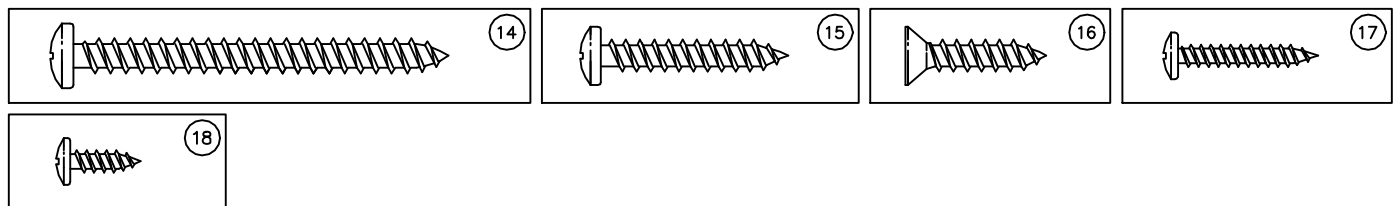

TOOLS REQUIRED FOR INSTALLATION OF MODEL S-3 WITH MAGNETIC STRIKE:

1. Caulking gun + approved silicone sealant
2. Rubber mallet
3. Hacksaw
4. Philips screwdriver
5. Mill file to smooth cut edges or radius
6. 1/8" drill bit for 6x screws
7. 5/32" drill bit for 10x2 screws
8. 1/4" drill bit for plastic anchors
9. 1/4" carbide drill bit for tile anchors
10. C-clamp